



Foot Sizing Chart

By default, the top cover size used is based on the shoe size provided in the order form and in the measurement of the cast. If you would like the top covers to be a bit longer, so you can trim them to fit, please ask for oversized top covers on your order form.

Mens	Length in CM		Womens	Length in CM		Kids	Length in CM
4	23.5		5	22.5		1Y	20.1
5	24		6	23.5		1.5Y	20.5
6	24.5		7	24		2Y	20.9
7	26		8	25		2.5Y	21.4
8	26.5		9	26		3Y	21.8
9	27		10	26.5		3.5Y	22.2
10	28		11	27.5		4Y	22.4
11	28.5		12	28.5		4.5Y	22.7
12	29.5					5Y	23.2
13	30					5.5Y	23.5
14	31					6Y	23.8
15	32					6.5Y	24.3
16	33					7Y	24.6
17	33.5						
18	34						